

PUSHBUTTONS

From surface mount to flush mount and polished brass to satin nickel and oil-rubbed bronze, NuTone push buttons are specifically designed to meet your individual style and function needs.



| Part No. | Description | Std. Pack | UPC |
|-----------|---|-----------|--------------|
| PB15LBR | Lighted pushbutton, oil rubbed bronze finish | 1 pc. | 026715179909 |
| PB15LPB | Lighted pushbutton, polished brass finish | 1 pc. | 026715179800 |
| PB15LSN | Lighted pushbutton, satin nickel finish | 1 pc. | 026715179763 |
| PB18LWHCL | Replacement lighted pushbutton | 1 pc. | 784891993626 |
| PB18WHCL | Replacement unlighted pushbutton | 1 pc. | 784891051777 |
| PB27LBR | Lighted pushbutton, oil rubbed bronze finish | 1 pc. | 026715179916 |
| PB27LPB | Lighted pushbutton, polished brass finish | 1 pc. | 026715180028 |
| PB27LSN | Lighted pushbutton, satin nickel finish | 1 pc. | 784891052446 |
| PB29LR | Lighted pushbutton, brown rust finish | 1 pc. | 784891052521 |
| PB41LBGL | Lighted pushbutton for stucco application, brass finish | 1 pc. | 784891998973 |
| PB41LBR | Lighted pushbutton for stucco application, oil rubbed bronze finish | 1 pc. | 784894053504 |
| PB41LSN | Lighted pushbutton for stucco application, satin nickel finish | 1 pc. | 784891053511 |
| PB41LWH | Lighted pushbutton for stucco application, white finish | 1 pc. | 784891053528 |
| PB49LPB | Lighted pushbutton, polished brass finish | 1 pc. | 026715179848 |
| PB4LBL | Lighted pushbutton, black finish | 1 pc. | 026715179978 |
| PB4LBR | Lighted pushbutton, rubbed bronze finish | 1 pc. | 026715179893 |
| PB4LSN | Lighted pushbutton, satin nickel finish | 1 pc. | 026715179756 |
| PB4LWH | Lighted pushbutton, white finish | 1 pc. | 026715179961 |
| PB53LWH | Lighted pushbutton, white finish | 1 pc. | 026715179954 |
| PB56LPB | Lighted pushbutton, polished brass finish | 1 pc. | 026715179794 |
| PB64LAB | Lighted pushbutton, antique brass finish | 1 pc. | 026715179923 |
| PB67AB | Unlighted, antique brass finish unlighted | 1 pc. | 026715179930 |
| PB67PB | Unlighted, polished brass finish unlighted | 1 pc. | 026715179886 |
| PB69LBL | Lighted pushbutton, black finish | 1 pc. | 026715179985 |
| PB69LPB | Lighted pushbutton, polished brass finish | 1 pc. | 026715179787 |
| PB69LPC | Lighted pushbutton, polished chrome finish | 1 pc. | 026715180004 |
| PB69LSN | Lighted pushbutton, satin nickel finish | 1 pc. | 026715179770 |
| PB69LWH | Lighted pushbutton, white finish | 1 pc. | 026715179947 |
| PB72WH | Unlighted pushbutton, white finish (WIRELESS) | 1 pc. | 026715180011 |
| PB75BR | Unlighted pushbutton, rubbed bronze finish (WIRELESS) | 1 pc. | 784891054501 |
| PB75SN | Unlighted pushbutton, satin nickel finish (WIRELESS) | 1 pc. | 784891054518 |
| PB7LBL | Lighted pushbutton, black finish | 1 pc. | 784891060014 |
| PB7LWH | Lighted pushbutton, white finish | 1 pc. | 784891060045 |
| PB7LPB | Lighted pushbutton, polished brass finish | 1 pc. | 784891060021 |
| PB7LSN | Lighted pushbutton, satin nickel finish | 1 pc. | 784891060038 |
| PB7LWH | Lighted pushbutton, white finish | 1 pc. | 784891060045 |