




Pushbutton Units and Indicator Lights

Class 50 Standard Duty Pushbutton Stations

5A 600V AC NEMA B600

Selection and ordering data

| | Operator identification | Degree of protection | Contacts / voltage | Number of command points | Order No. | List Price \$ | Packs |
|--|--|---|---------------------------------------|---------------------------------------|----------------|----------------|-------|
| | | | | | 1 unit | | Unit |
|  <p>1 unit surface mount-momentary pushbutton</p> | A = Momentary flush pushbutton green, surface, label "START" | NEMA 1 | 1NO - 1NC with common jumper (50ZAC1) | 1 | 50AA3D | | 1 |
| | A = Momentary flush pushbutton red, surface, label "STOP" | NEMA 1 | 1NO - 1NC with common jumper (50ZAC1) | 1 | 50AA3E | | 1 |
| | A = Momentary raised pushbutton red, surface, label "STOP" | NEMA 1 | 1NO - 1NC with common jumper (50ZAC1) | 1 | 50AA3F | | 1 |
| | A = Momentary mushroom head red, surface, label "STOP" | NEMA 1 | 1NO - 1NC with common jumper (50ZAC1) | 1 | 50AA3G | | 1 |
| | A = Momentary flush pushbutton less insert, surface | NEMA 1 | 1NO - 1NC with common jumper (50ZAC1) | 1 | 50AA3A | | 1 |
| | A = 3 position selector switch, surface, label "HAND-OFF-AUTO" | NEMA 1 | 2 NO 2SPST (50ZAC8) | 1 | 50AA3C3 | | 1 |
| | A = 2 position selector switch, surface, label "Off-On" | NEMA 1 | 2 NO 2SPST (50ZAC8) | 1 | 50AA3C6 | | 1 |
| | A = 2/3 selector switch, surface, multiple legends | NEMA 1 | 2 NO 2SPST (50ZAC8) | 1 | 50AA3B9 | | 1 |
| | A = Indicator light, red, surface | NEMA 1 | 120/240V dual voltage 120PSB lamp | 1 | 50BA3Y | | 1 |
| | A = Indicator light, green, surface | NEMA 1 | 120/240V dual voltage 120PSB lamp | 1 | 50BA3Z | | 1 |
| | A = Indicator light, less lens, surface | NEMA 1 | 120/240V dual voltage 120PSB lamp | 1 | 50BA32 | | 1 |
| | A = Momentary flush pushbutton green, flush, label "START" | NEMA 1B | 1NO - 1NC with common jumper (50ZAC1) | 1 | 50AA2D | | 1 |
| |  <p>1 unit flush mount-momentary pushbutton</p> | A = Momentary flush pushbutton red, flush, label "STOP" | NEMA 1B | 1NO - 1NC with common jumper (50ZAC1) | 1 | 50AA2E | |
| A = Momentary raised pushbutton red, flush, label "STOP" | | NEMA 1B | 1NO - 1NC with common jumper (50ZAC1) | 1 | 50AA2F | | 1 |
| A = Momentary flush pushbutton less insert, flush | | NEMA 1B | 1NO - 1NC with common jumper (50ZAC1) | 1 | 50AA2A | | 1 |
| A = Momentary flush pushbutton less insert, flush, chrome plate | | NEMA 1B | 1NO - 1NC with common jumper (50ZAC1) | 1 | 50AA6A | | 1 |
| A = 3 position selector switch, flush, label "HAND-OFF-AUTO" | | NEMA 1B | 2 NO 2SPST (50ZAC8) | 1 | 50AA2C3 | | 1 |
| A = 3 position selector switch, flush, label "Off-On" | | NEMA 1B | 2 NO 2SPST (50ZAC8) | 1 | 50AA2C6 | | 1 |
| A = 2/3 selector switch, multiple legends, flush | | NEMA 1B | 2 NO 2SPST (50ZAC8) | 1 | 50AA2B9 | | 1 |
| A = 2/3 selector switch, multiple legends, chrome plate, flush | | NEMA 1B | 2 NO 2SPST (50ZAC8) | 1 | 50AA6B9 | | 1 |
| A = Indicator light, red, flush | | NEMA 1B | 120/240V dual voltage | 1 | 50BA2Y | | 1 |
| A = Indicator light, green, flush | | NEMA 1B | 120/240V dual voltage | 1 | 50BA2Z | | 1 |
| A = Indicator light, less lens, flush | | NEMA 1B | 120/240V dual voltage | 1 | 50BA22 | | 1 |
| A = Indicator light, less lens, chrome plate, flush | | NEMA 1B | 120PSB lamp | 1 | 50BA62 | | 1 |
|  <p>2 unit surface mount-momentary pushbutton</p> | | B = Momentary pushbutton green, surface, label "START" | NEMA 1 | 1NO, 1NC (50ZAC2) | 2 | 50CA3DE | |
| | A = Momentary pushbutton red, surface, label "STOP" | | | | | | |
| | B = Momentary pushbutton green, surface, label "START" | NEMA 1 | 1NO, 1NC (50ZAC2) | 2 | 50CA3DF | | 1 |
| | A = Momentary raised pushbutton red, surface, label "STOP" | | | | | | |
| | B = Momentary pushbutton green, surface, label "START" | NEMA 1 | 1NO, 1NC (50ZAC2) | 2 | 50CA3DG | | 1 |
| | A = Momentary mushroom head pushbutton red, surface, label "STOP" | | | | | | |
| | B = Momentary pushbutton, less insert, surface | NEMA 1 | 1NO, 1NC (50ZAC2) | 2 | 50CA3AA | | 1 |
| | A = Momentary pushbutton, less insert, surface | | | | | | |
| | B = Momentary pushbutton, surface, label "FORWARD" | NEMA 1 | 2 NO (50ZAC3) | 2 | 50DA3KL | | 1 |
| | A = Momentary pushbutton, surface, label "REVERSE" | | | | | | |