

CATALOG NUMBER

# ECMBR2

electriCenter

ACCESSORIES

## Main Breaker Hold Down Kit

Same As:

■ MBR2    ■ MBR2M



### INSTALLATION INSTRUCTIONS



#### ⚠ DANGER

**Hazardous Voltage.**  
Will cause death, serious injury  
or substantial property damage.

Turn off power supplying this  
equipment before working inside.



#### SAFETY INSTRUCTIONS


**Note:** This instruction outlines the recommended installation procedure.

For use only where specified on panel label. Attach "Main" label near main breaker or "Service Disconnect" label only when panel is used for service equipment.

This kit is intended for 2 pole Siemens type QP, QPH or HQP breakers, and 2 pole Murray type MP-T, MP-HT or MP-MT breakers.

1. Turn off and lock off the power supplying this equipment before working inside.
2. Insert hook portion of the plastic breaker retainer between the circuit breaker poles as shown.
3. Align the screw holes in the retainer and the basepan. Insert the screw into the breaker retainer as shown.
4. Tighten retainer screw to 10-15 lb-ins.

**Note:** back-fed breaker must be installed on left hand side of interior as shown.

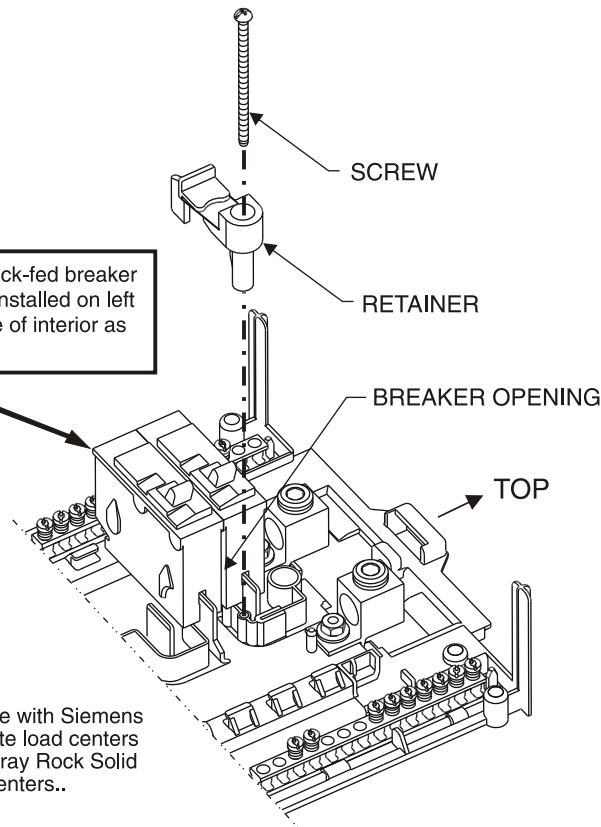

For use with Siemens Ultimate load centers or Murray Rock Solid load centers..